## RACE TECH FORK REBOUND GOLD VALVE

<IPM FRGV CuppedWasher.doc> © 5-20-25


**Cupped Washer** 

# Scan QR Codes or go to racetech.com




- DVS Valving Search for Custom Setup
  - Instructions see Instruction Search
  - Note: You will have extra shims.




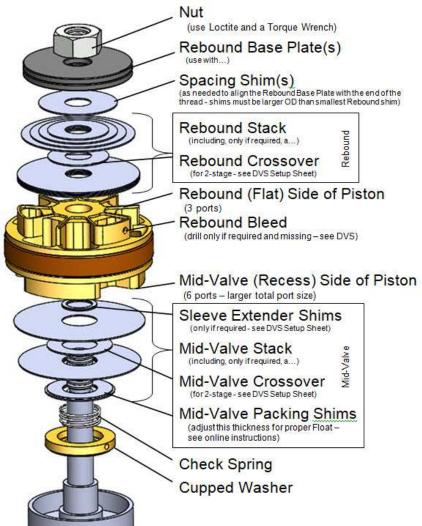

### PISTON ORIENTATION - make sure the correct side is up

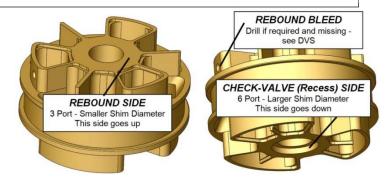

#### **CUPPED WASHER LOCATION**

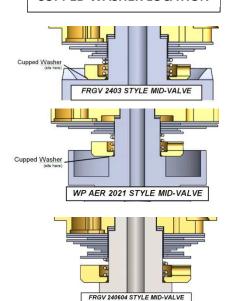

### STACK HEIGHT

Too Low

The total valve stack height is too low. The end of the thread must be covered by the Base Plate by at least ½ mm.

Spacing Shims larger in diameter than the smallest shim in the valve stack can be added next to the Base Plate to adjust.

