
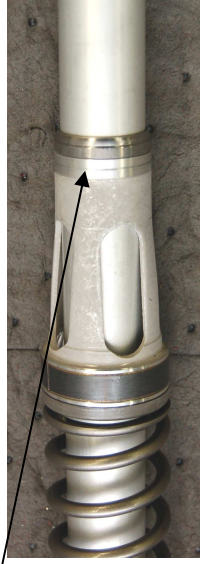


***WARNING* FOR FRSP 4446 SERIES SPRINGS.
INSTALL FPSS 283203 ON THE TOP OF SPRING
PERCH. 455mm SPRING WILL GIVE YOU 2mm
PRELOAD. ADJUST AS NEEDED. RECOMMEND
3-5mm PRELOAD.**

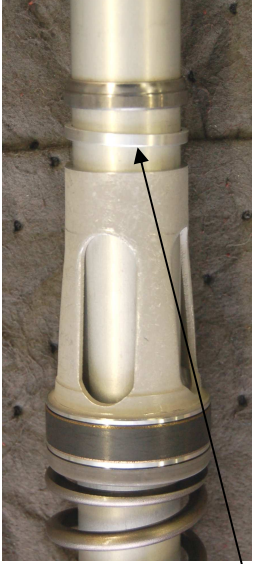

FPSS 283203